

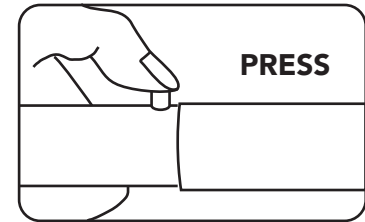
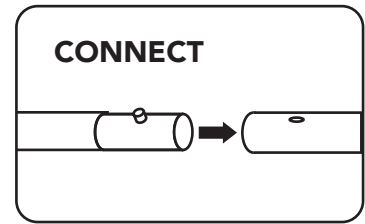
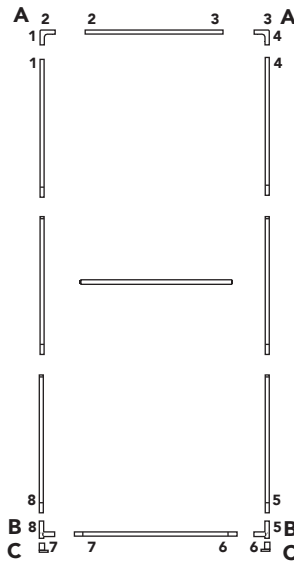


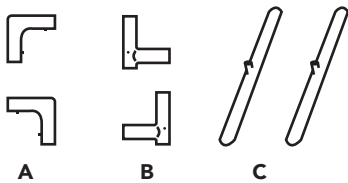

PORTOFINO BACKDROP




STEP 1

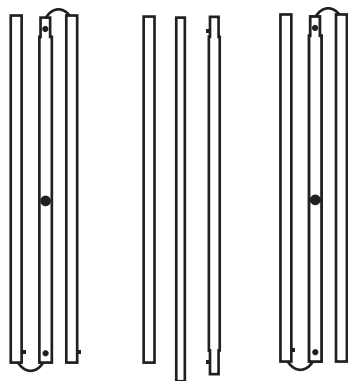

If it won't snap - dismantle the frame and push the tube forwardly and push again

Frame size: W(610mm/762mm/850mm/915mm/1219mm/1524mm)*H2280

STEP 2

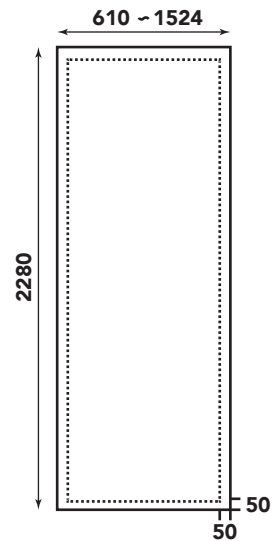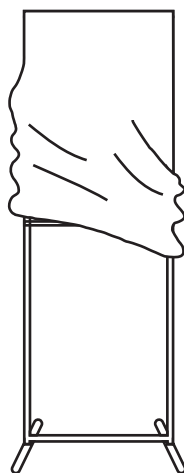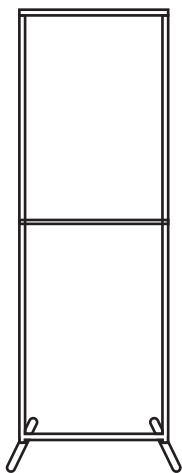

GRAPHIC